



Y-AXIS

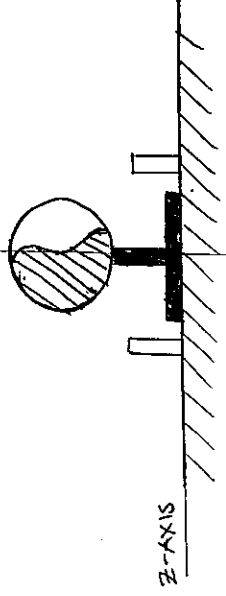

Z-AXIS

Y-AXIS

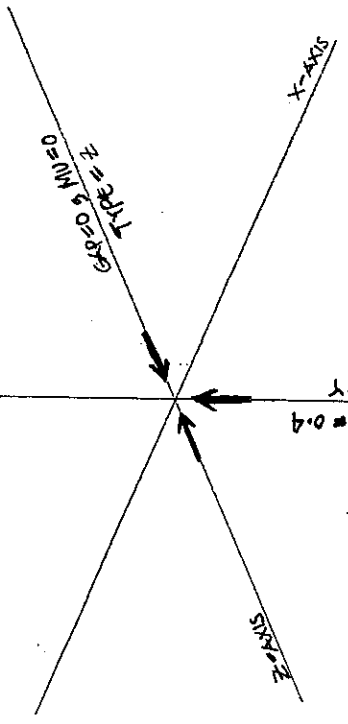


$GAP = 0, MU = 0.4$   
 TYPE = +Y

TYPE = Z  
 $GAP = 0, MU = 0$

Z-AXIS

X-AXIS

5MM

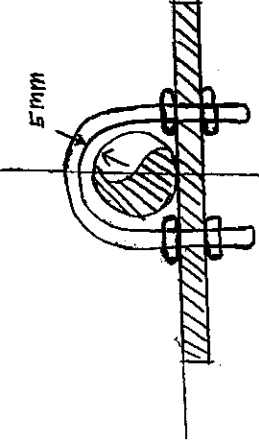

Y-AXIS

MU = 0.4  
 $GAP = 5mm$   
 TYPE = -Y


TYPE = Z  
 $GAP = 5mm, MU = 0.4$

Z-AXIS

X-AXIS


LOOSE TYPE U-BOLT

Y-AXIS

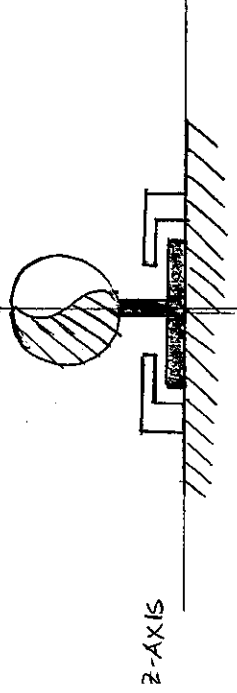

Z-AXIS

Y-AXIS

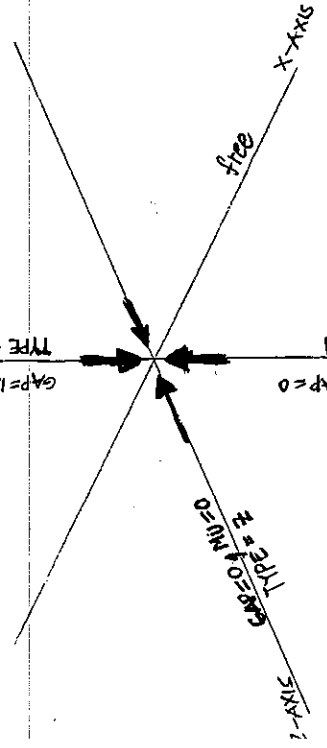

TYPE = +Y  
 $GAP = 15, MU = 0$


TYPE = Z  
 $GAP = 0, MU = 0$

free

Z-AXIS

X-AXIS

Y-AXIS

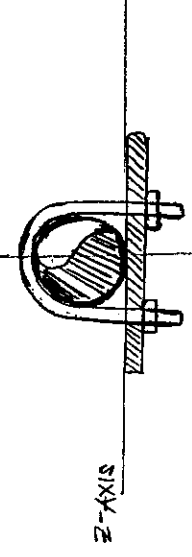

Y-AXIS

TYPE = -Y  
 $GAP = 0, MU = 0.4$

TYPE = Z  
 $GAP = 0, MU = 0.4$

Z-AXIS

X-AXIS

RIGID TYPE U-BOLT